



Attention ! Installation notice !


New BPW hub cap with bayonet lock

Removal

Unscrew the hub cap with a 120 mm hub cap spanner (BPW code number 03.339.05.07.0)

Important! Do not use an impact driver for removal and installation of hub caps/ ECOMETERS with bayonet lock!

Turn the hub cap from position (Fig. 1) to position (Fig. 2) by turning anticlockwise about 30°. The hub cap lifts off the ECO unit in this position and can be pulled off axially.

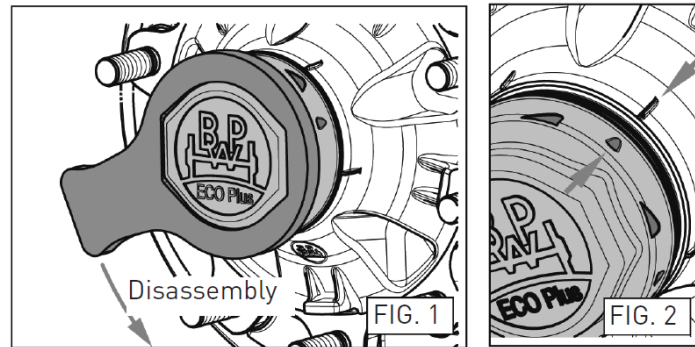

Installation

Insert the new O-ring into the groove in the wheel hub. (Fig. 3) **A new O-ring must be used every time the hub cap is removed.**

Apply a thin coat of BPW special long life grease ECO-LIPlus to the area of the bayonet lock.

Push on the hub cap, see position (Fig. 4 & 5), and turn it clockwise at the same time as pressing on axially to lock it in place.

A tight seat is provided when position (Fig. 6) is reached.

Note! Please, do not keep on turning!

