

BPW Air Bags

BPW original air bags are always supplied with the top M12 collar nuts and the bottom M16 mounting screws. Both of which are Geomet coated components to prevent rust and corrosion.

When replacing a damaged air bag, always fit new screws and collar nuts in order to ensure the longevity of the fitment.

The required tightening torques are as follows:

- M12 collar nuts – 66Nm
- M16 mounting screws – 230Nm

Always tighten with a calibrated torque wrench

The original mounting screws and collar nuts are also available in kit form with the part number PE084-954.00A

It is important to take note that the replacement of the air bag is a safety critical process and that severe injury can occur if not done correctly. For the correct removal procedure, please refer to the dismantling and assembly of air bags section on in the air suspensions workshop manual.

The manual can be downloaded from the link below:

https://www.bpw.co.za/downloads/manuals/2017/BPW-WH-AL-SL-O_35391601e.pdf

